



Guide to Loading and Unloading the ZIP System™ Tape Gun



Note: You can easily and efficiently install the new linerless tape with your current ZIP System™ Tape Gun. There's no need for new equipment. (See reverse side for details.)

Linerless Tape Loading

Step 1. Pull the lever inside the unwind spool prior to loading tape roll.



Step 2. Place tape roll onto unwind spool so the leading edge unwinds counterclockwise.



Step 3. Push lever to lock tape roll into place.



Step 4. Feed leading edge underneath the bottom of the take-up spool and toward pressure roller.



Step 5. Pull tape underneath pressure roller with enough excess to begin applying to panel seam. Pull tape gun to dispense. Pressure roller imprint (diamond pattern) should be observed on tape.




See reverse side for information on how to unload the empty tape roll.

Lined Tape Loading

Step 1. Follow Steps 1-3 on reverse side to load tape roll, then open liner clamp and separate approximately 4" of liner from tape roll.



Step 2. Feed liner onto the take-up spool and close liner clamp so it snaps shut.

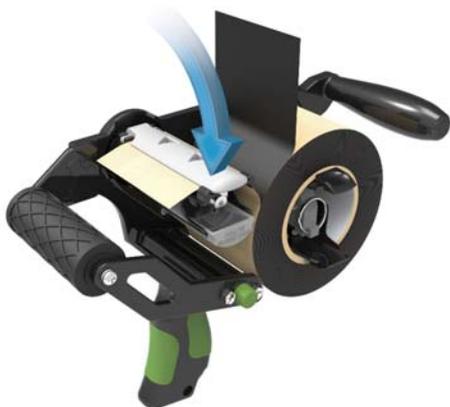

Step 3. Feed tape over the top of the take-up spool and under the pressure roller.



Tension Adjustment

If the tape gun requires too much pulling force to dispense the tape, reduce tension by turning the tension adjustment knob counterclockwise. If liner is not being accumulated correctly, increase the tension by turning it clockwise.



Tape Unloading

To remove empty tape core, lift pull ring. Squeeze thumb tabs while pulling the core away from the gun.

